

Models Covered in This Service Manual

12-Volt Bow Mount Foot Steer

BF2S
BF2TS
BFL2TS
BFX2TS
HBF2K
HBFL2K

12-Volt Bow Mount Hand Steer

BH2TS
BHL2TS

12-Volt Transom Mount Hand Steer

TH2TS

12/24-Volt Bow Mount Foot Steer

BF4S
BFL4S
BFX4S
BF4TS
BFL4TS
BFX4TS

24-Volt Bow Mount Foot Steer – Pulse Width Modulation

BF4PV
BFL4PV
BFX4PV
BF4TPV
BFL4TPV
BFX4TPV

12/24-Volt Bow Mount Hand Steer

BHL4S
BHL4TS

12/24-Volt Transom Mount Hand Steer

TH4TS