ARRANGEMENT OF THIS MANUAL

This manual is divided into 13 major sections:

INTRODUCTION

- 1. SPECIAL TOOLS & SERVICE SPECS
- 2. INSTALLATION AND PREDELIVERY
- 3. MAINTENANCE
- 4. ELECTRICAL
- 5. IGNITION
- 6. FUEL SYSTEM
- 7. POWERHEAD
- 8. MIDSECTION
- 9. GEARCASE
- 10. MANUAL STARTER
- 11. SAFETY

WIRING DIAGRAMS


MODELS COVERED IN THIS MANUAL

This manual covers service information on Johnson 9.9 through 30 HP 2-Stroke models. Use this manual together with the proper Parts Catalog for part numbers and for exploded views of the outboard, which are a valuable aid to disassembly and reassembly.


This manual presents the U.S. values and dimensions first and the metric values and dimensions second, inside parentheses ().

IDENTIFYING MODEL AND SERIAL NUMBERS

Outboard model and serial numbers are located on the swivel bracket and on the powerhead.

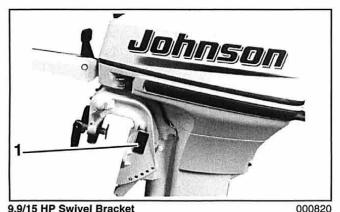


9.9/15 HP Swivel Bracket Model and serial number

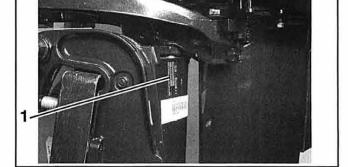


25/30 HP Swivel Bracket Model and serial number

001005

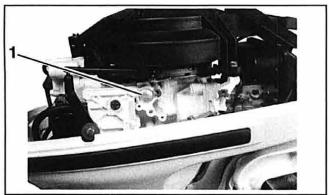

9.9/15 HP Powerhead Serial number

000821

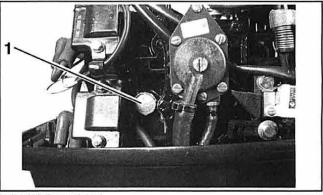

25/30 HP Powerhead Serial number

001006