


FENDERS AND FUEL TANK


FRONT FENDER

Removal



1. Place the machine on a level place.
2. Remove:
 - Front carrier ① (except for USA)

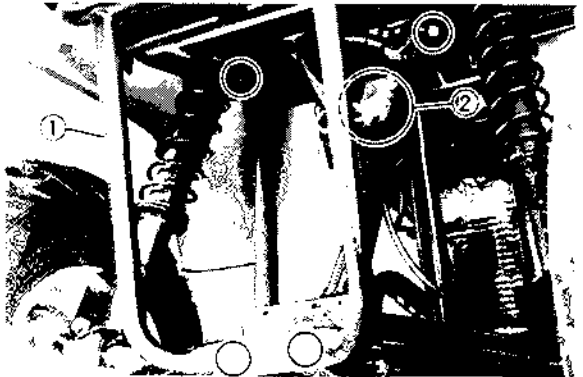

3. Remove:
 - Front bumper ①
4. Disconnect:
 - Dual headlight leads ②

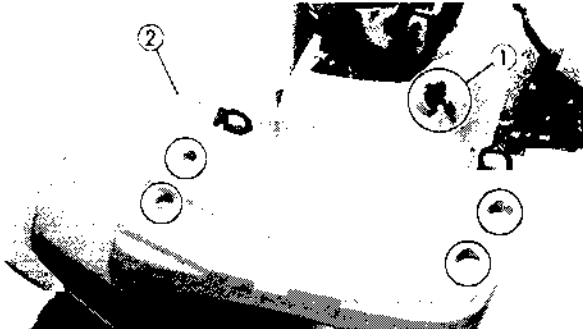

5. Remove:
 - Starter lever ①
 - Front fender ②

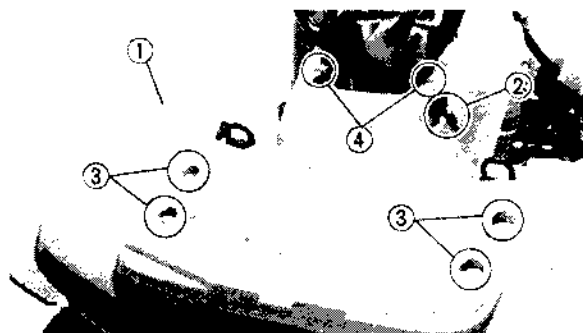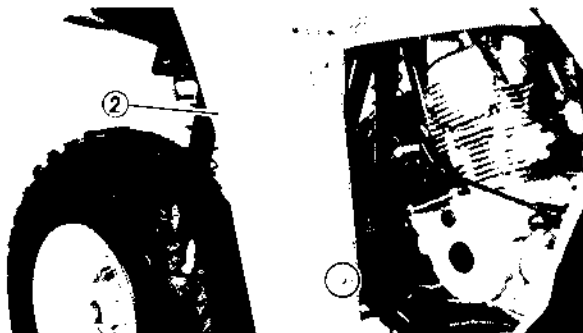

Installation

Reverse the "Removal" procedures.
Note the following points.

1. Install:
 - Front fender ①
 - Starter lever ②