

9. OIL PRESSURE SWITCH (HIGH PRESSURE SIDE).....	5-96
10. OIL PRESSURE SWITCH (LOW PRESSURE SIDE)	5-97
11. KNOCK SENSOR.....	5-98
12. ECT SENSOR.....	5-98
13. OVERHEAT SENSOR 1, 2	5-98
14. IAC VALVE.....	5-99
15. IAT SENSOR.....	5-99
16. MAP SENSOR	5-99
17. HO2S.....	5-100
18. BARO SENSOR	5-100
19. CKP SENSOR	5-101
20. TDC SENSOR 1, 2	5-101
21. VTEC SYSTEM(BF225A).....	5-102
22. SILENCER CASE	5-103
23. THROTTLE BODY.....	5-107
24. INTAKE MANIFOLD	5-112
25. EXHAUST MANIFOLD.....	5-117
6. ALTERNATOR/TIMING BELT/PULLEYS	6-1
1. ALTERNATOR.....	6-2
2. TIMING BELT/TIMING BELT DRIVE PULLEY/ DRIVEN PULLEYS	6-15
7. ENGINE REMOVAL/INSTALLATION.....	7-1
1. REMOVAL	7-2
2. EXPLODED VIEW	7-7
3. INSTALLATION.....	7-8
8. WATER JACKET/RELIEF VALVE/ FLUSH VALVE.....	8-1
1. WATER LINE DESCRIPTION	8-2
2. WATER JACKET	8-3
3. RELIEF VALVE.....	8-4
4. FLUSH VALVE.....	8-5
9. CYLINDER HEAD/VALVES.....	9-1
1. CYLINDER HEAD ASSEMBLY	9-2
2. CYLINDER HEAD DISASSEMBLY	9-5
3. INSPECTION.....	9-8
4. VALVE GUIDE REPLACEMENT.....	9-16
5. VALVE SEAT RECONDITIONING.....	9-18
6. CYLINDER HEAD REASSEMBLY.....	9-20
7. CYLINDER HEAD ASSEMBLY INSTALLATION.....	9-24
10. FLYWHEEL/OIL PUMP	10-1
1. REMOVAL	10-2
2. OIL PUMP DISASSEMBLY.....	10-4
3. INSPECTION.....	10-5
4. EXPLODED VIEW	10-7
5. INSTALLATION.....	10-8
11. CYLINDER BLOCK/CRANKSHAFT/PISTON	11-1
1. OIL FILLER EXTENSION	11-2
2. CRANKCASE COVER/CRANKSHAFT/ PISTON DISASSEMBLY.....	11-3
3. INSPECTION.....	11-7
4. BEARING SELECTION	11-15
5. EXPLODED VIEW	11-19
6. CRANKCASE COVER/CRANKSHAFT/ PISTON REASSEMBLY.....	11-23
12. PROPELLER/GEAR CASE/EXTENSION CASE... ..	12-1
1. PROPELLER	12-2
2. GEAR CASE ASSEMBLY	12-3
3. WATER PUMP/SHIFT ROD	12-9
4. PROPELLER SHAFT HOLDER ASSEMBLY... ..	12-19
5. PROPELLER SHAFT/PROPELLER SHAFT HOLDER.....	12-20
6. VERTICAL SHAFT/BEVEL GEAR	12-35
7. SHIM SELECTION	12-46
8. SHIM POSITION	12-54
9. BACKLASH ADJUSTMENT	12-56
10. LOWER RUBBER MOTOR MOUNT EXTENSION CASE/UNDERCOVER	12-59
13. OIL PAN/MOUNT CASE.....	13-1
1. OIL PAN/EXHAUST PIPE/WATER TUBE	13-2
2. MOUNT CASE/UPPER MOUNT RUBBER/ SHIFT SHAFT A, B	13-5
14. SWIVEL CASE/POWER TRIM/ TILT ASSEMBLY	14-1
1. SWIVEL CASE/STERN BRACKET ASSEMBLY REMOVAL/INSTALLATION.....	14-2
2. POWER TRIM/TILT ASSEMBLY/STERN BRACKET/SWIVEL CASE ASSEMBLY	14-3
3. MOUNT FRAME	14-10
4. POWER TRIM/TILT ASSEMBLY.....	14-17
5. POWER TILT MOTOR ASSEMBLY	14-31
15. STEERING ROD/REMOTE CONTROL BOX	15-1
1. STEERING ROD (OPTIONAL PART).....	15-1
2. REMOTE CONTROL BOX (OPTIONAL PART).....	15-2
3. CONTROL PANEL (OPTIONAL PART).....	15-7
4. INSPECTION.....	15-9
16. CABLES/SHIFT LINK BRACKET/SHIFT ARM	16-1
1. REMOTE CONTROL CABLE (SHIFT SIDE/THROTTLE SIDE).....	16-2
2. THROTTLE ARM/SHIFT LINK BRACKET	16-5
3. SHIFT ARM/LINK ROD/NEUTRAL SWITCH... ..	16-9
17. ELECTRICAL EQUIPMENT	17-1
1. COMPONENT LOCATION.....	17-1
2. PGM-FI MAIN RELAY/ POWER TILT RELAY.....	17-8
3. ECM	17-12
4. STARTER MOTOR.....	17-13
5. ACG FUSE BOX/FUSE BOX	17-21
6. SWITCH PANEL AND INDICATOR WIRE HARNESSSES	17-24
7. INSPECTION.....	17-28
18. OPERATION	18-1
1. PROGRAMMED FUEL INJECTION SYSTEM (PGM-FI)	18-1
19. WIRING DIAGRAM.....	19-1