

1. SPECIFICATIONS .....	1-1	4. ENGINE COVER / THROTTLE / CHOKE .....	4-1
1. SPECIFICATIONS .....	1-1	1. ENGINE COVER .....	4-1
2. DIMENSIONAL DRAWINGS .....	1-4	2. THROTTLE CAM / THROTTLE CABLE .....	4-3
2. SERVICE INFORMATION .....	2-1	3. CHOKE KNOB ROD .....	4-4
1. THE IMPORTANCE OF PROPER SERVICING .....	2-1	5. FUEL SYSTEM .....	5-1
2. IMPORTANT SAFETY PRECAUTIONS .....	2-1	1. CARBURETOR REMOVAL / INSTALLATION .....	5-1
3. SERVICE RULES .....	2-2	2. CARBURETOR DISASSEMBLY / ASSEMBLY ...	5-4
4. SERIAL NUMBER LOCATION .....	2-2	3. FUEL PUMP .....	5-10
5. MAINTENANCE STANDARDS .....	2-3	4. FUEL FILTER / FUEL TUBE .....	5-11
6. TORQUE VALUES .....	2-7	5. FUEL TANK (EQUIPED TYPE) .....	5-13
7. SPECIAL TOOLS .....	2-10	6. ALTERNATOR / TIMING BELT .....	6-1
8. TROUBLESHOOTING .....	2-13	1. TIMING BELT COVER / STARTER PULLEY /	
A. HARD STARTING .....	2-13	ALTERNATOR ROTOR / TIMING BELT / DRIVEN	
Cylinder Compression Test .....	2-14	PULLEY / DRIVE PULLEY / TIMING BELT	
B. IGNITION SYSTEM .....	2-15	LOWER COVER .....	6-1
Spark Test .....	2-16	7. ENGINE REMOVAL / INSTALLATION .....	7-1
C. STARTER MOTOR .....	2-17	1. REMOVAL .....	7-1
D. ENGINE DOES NOT RUN SMOOTHLY .....	2-19	2. INSTALLATION .....	7-6
E. ALERT SYSTEM .....	2-20	8. WATER JACKET COVER / THERMOSTAT /	
Oil Pressure Test .....	2-22	THERMOSWITCH .....	8-1
F. SHIFT LEVER .....	2-23	1. FLUSHING WATER HOSE .....	8-1
G. ASSIST TILT LOAD .....	2-25	2. THERMOSTAT / THERMOSWITCH /	
H. THE ASSIST TILT DOES NOT HOLD .....	2-25	FLUSH VALVE .....	8-2
I. POWER TRIM / TILT ASSEMBLY		3. RELIEF VALVE / WATER BYPASS HOSE .....	8-4
DOES NOT MOVE .....	2-26	4. WATER JACKET COVER .....	8-6
J. THE POWER TRIM / TILT ASSEMBLY		9. CYLINDER HEAD / VALVES / OIL PUMP .....	9-1
DOES NOT HOLD .....	2-27	1. CYLINDER HEAD ASSEMBLY REMOVAL/	
9. CABLE / HARNESS ROUTING .....	2-29	INSTALLATION .....	9-1
10. TUBE ROUTING .....	2-37	2. OIL PUMP .....	9-6
11. LUBRICATION .....	2-39	3. CYLINDER HEAD DISASSEMBLY /	
3. MAINTENANCE .....	3-1	ASSEMBLY .....	9-7
1. MAINTENANCE SCHEDULE .....	3-1	4. INSPECTION .....	9-12
2. ENGINE OIL .....	3-2	5. VALVE GUIDE REPLACEMENT .....	9-17
3. OIL FILTER .....	3-3	6. VALVE SEAT RECONDITIONING .....	9-19
4. GEAR OIL .....	3-4	10. CRANKCASE / CYLINDER BLOCK /	
5. SPARK PLUGS .....	3-5	CRANKSHAFT / PISTON / FLYWHEEL .....	10-1
6. VALVE CLEARANCE .....	3-5	1. CRANKCASE .....	10-1
7. FUEL FILTER .....	3-7	2. CYLINDER BLOCK / CRANKSHAFT .....	10-4
8. FUEL TANK STRAINER .....	3-8	3. PISTON .....	10-6
9. CARBURETOR .....	3-9	4. INSPECTION .....	10-11
10. CARBURETOR SYNCHRONIZATION .....	3-10	5. BEARING SELECTION .....	10-16
11. ACCELERATION DEVICE / DIAPHRAGM		11. PROPELLER/GEAR CASE/EXTENSION CASE .....	11-1
ASSEMBLY .....	3-11	1. PROPELLER / PROPELLER SHAFT HOLDER	
12. THROTTLE CABLE ADJUSTMENT .....	3-12	ASSEMBLY .....	11-1
13. SHIFT CABLE ADJUSTMENT .....	3-15	2. PROPELLER SHAFT / PROPELLER SHAFT	
14. CHOKE KNOB ROD ADJUSTMENT .....	3-16	HOLDER .....	11-4
15. CHOKE SOLENOID ADJUSTMENT		3. GEAR CASE ASSEMBLY .....	11-10
(REMOTE CONTROL TYPE) .....	3-16	4. WATER PUMP .....	11-12
16. TIMING BELT .....	3-17	5. VERTICAL SHAFT / BEVEL GEAR .....	11-15
17. CRANKCASE BREATHER		6. SHIM SELECTION .....	11-25
(BODENSEE TYPE ONLY) .....	3-24		
18. EXHAUST EMISSION			
(BODENSEE TYPE ONLY) .....	3-24		