



30343

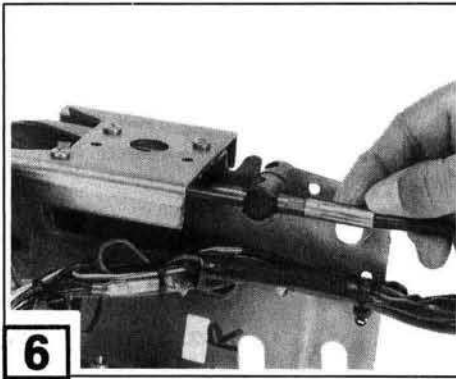

30342

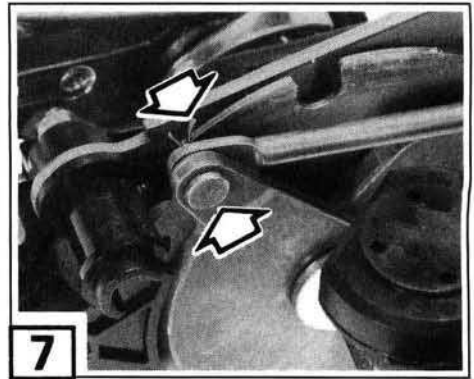

30341

Throttle Cable


5 4. Place throttle cable anchor into slot stamped "OMC" in the **FRONT** of the control.

Note The bottom slots are for SAE cables.


6 5. Install throttle cable trunnion into anchor.

7 **⚠** 6. Pull cable to **HANDLE SIDE** of throttle lever, aligning cable end hole with hole in lever. Install cable pin from horn side. **Install cotter pin and secure by spreading ends.**

8 7. Position anchor retainer **E** on cable trunnion and anchor, and install screw and locknut. Torque to 25-35 in. lbs. (2,8-4,0 N·m).

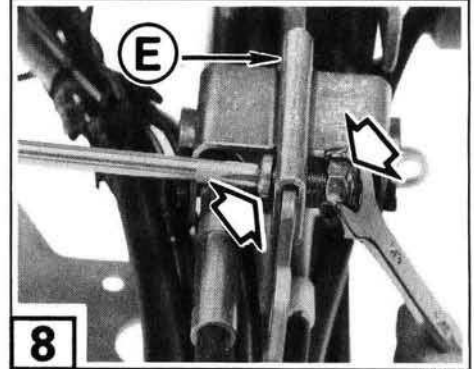

30340

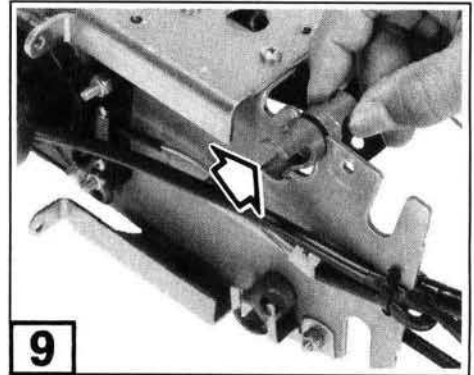


30339

Shift Cable

9 1. Place shift cable anchor into slot stamped "OMC" in the **REAR** of the control.

10 2. Install shift cable trunnion into anchor.

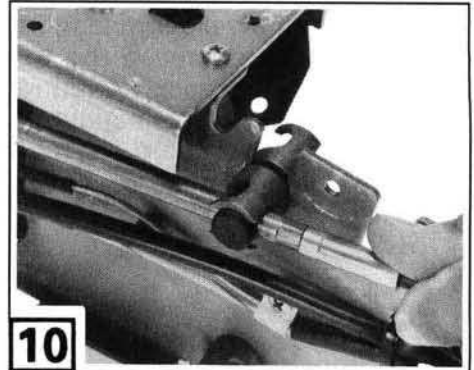

30338